PELLET EXTRUDER

3D Cultures



USER MANUAL Version 1.0

- \otimes Product pictures are for reference only.
- & Color(s), size, parts, and interface may vary.
- \otimes Preheating is not recommend with the use of cells.
- & This manual and specifications described herein are subject to change without notice.
- \otimes All trademarks are the sole property of their respective companies.
- ⊗ This product does not provide a User Interface but reference many that are helpful.
- ⊗ Copyright © 2017 3D Cultures. All Rights Reserves.

TABLE OF CONTENTS

SAFETY WARNINGS & PRECAUTIONS
OVERVIEW
PACKAGE CONTENTS
FEATURES
CUSTOMER SERVICE & TECHNICAL SUPPORT
USING THE INTERACTIVE SCREEN SYSTEM
SOFTWARE INSTALLATION
Installing Cura for Windows4
Installing Repetier-Host13
PRINTER & NOZZLE SETUP15
Out of Box Setup15
Zeroing the nozzle
REGULATORY COMPLIANCE

SAFETY WARNINGS & PRECAUTIONS

- » This device is HOT! Do not touch hot surfaces.
- » The extruder holder can be very HOT! Do not touch when hot.
- » The build platform can be very HOT! Do not touch when hot.
- » Do not touch any moving parts during printing.
- » Do not set extremely high temperatures, this device is develop to provide a cell friendly environment of 37°C. Do not exceed 70°C.
- » Keep the printer and all accessories out of reach of children.
- » This is not a commercial product, it's a Research and Development device and should only be used for research and development only!
- » Do not use on humans or animals.
- » Do not remove or disconnect the USB cable when printing from a computer.
- » Do not pull or twist or modify the black cable at any time.
- » Do not force or tear anything during unpacking or setup.
- » Ensure the printer is turned off and unplugged when not in use.
- » Do not performance any modifications or repairs by yourself.
- » Do not open the printer.
- » Do not install this device on an unstable surface where it could fall and cause wither personal injury or damage to the device and/or other equipment.
- » Do not submerge the device in any liquid.
- » Do not subject the product to extreme force, shock, or fluctuation in temperature or humidity.
- » This device is intended for indoor use only.
- » Do not expose this device to water or moisture of any kind. Do not place drinks or other containers with moisture on or near the device. If moisture/liquid gets in or on the device, immediately unplug it from the outlet and allow it to fully dry before reapplying power. Do this at your own risk, it is recommended to purchase a replacement if the device is water damage.
- » Use only in a well-ventilated area.
- » Do not use in closed, confined spaces.
- » This device may be used in a bio-hood. Ensure device is sterile before placing into a bio-hood.
- » Device is not sterile upon arrival.
- » Sterilize the printer before using, for biological studies.
- » Prior to operation, ensure the power cord is not damage. Do not use if physical damage has occurred.
- » Never unplug the printer by pulling on the cord. Always grasp the connector head or adapter body.
- » Do not move the printer while it is plug in/power on. Always disconnect power source before moving the printer.

OVERVIEW

Thank you for purchasing this 3D Bio-Printer (pellet extruder) by 3D Cultures. At 3D Cultures, our aim is to use existing technologies and make by printing affordable. There are tons of new, great, and open source technology today that can aim in the development of 3D Bioprinting. This device/printer is built on a open source platform which requires some skills from the end-user. Since many open source user interface can be used with this printer, finding the right one for use will depend on what works for you. This printer also uses G-codes. If you're comfortable coding, this will be the best options. This device is a cheap options for anyone who wants to get into bioprinting. This device is not, by any means, developed for complex printing.

This printer has a single extruder (bio-head). It uses a standard BD 10mL syringe with interchangeable luerlock tips. This printer can print a variety of materials including, but is not limited to; gelatin, alginate, chitosan, collagen, etc. The limitation of printing is the material viscosity. Thick materials combined with extremely small tips may prove to be more difficult to print, compared to thinner materials and larger tips.

You can print from a Windows or Mac PC using a USB connection or print from 3D model files stored on a microSD card without the need for a computer connection. This printer is easy to use and setup.

PACKAGE CONTENTS

Below are a list of contents includes with your purchase. Please contact customer service for replacement of any missing items.

1x 3D Bio-Printer 1x USB Cable 1x MicroSD Card 1x tip (random size) 1x Hex Wrench 1x Power Adapter 1x AC Power Cord

FEATURES

- ✓ Syringe-based biohead
- ✓ Inter-changeable tips
- ✓ Can print a variety of materials, cells, and biologics
- ✓ Open frame allows for ease of use.
- ✓ Includes a microSD card with Cura, Repetier-Host, User Manual, and Nozzle Setup file.

CUSTOMER SERVICE & TECHNICAL SUPPORT

3D Cultures' Support team is always available to help. If you need any assistance please contact us via email at: <u>3dcultures@gmail.com</u>

USING THE INTERACTIVE SCREEN SYSTEM

This printer has an interactive screen to help with all your printing needs. The menu system is displayed on a lighted LCD Screen at the front of the printer.

- 1. The menu selection highlight or pointer is moved by rotating the control wheel to the right of the display.
- 2. Rotating the control wheel counterclockwise moves the highlight/pointer to the left and up.
- 3. Rotating the control wheel clockwise moves the highlight/pointer to the right and down.

- 4. Rotating the control wheel counterclockwise while editing a value decreases that value.
- 5. Rotating the control wheel clockwise while editing a value increases that value.
- 6. Pressing the center of the control wheel will activate the selected menu item or to save an edited value.

SOFTWARE INSTALLATION

The recommended method of printing is directly from a gcode file on the microSD card. This method does not require a continuous connection to your computer. Gcode files can be downloaded to the microSD card and then loaded into the printer.

To create your own gcode file(s), you may use an open source program, such as Cura or Repetier-Host (comes pre-installed within the MicroSD Card). These programs use M200 models (typically .STL or .OBJ files) and, using machine specific information, generate a gcode file with detailed instructions for the printer to create the selected model. We recommend start with Cura since it includes a Slicing Engine. However, most open source software will work.

Installing Cura for Windows

- 1. Use a card reader to read the contents on the included MicroSD card. Locate and double-click the **Cura_x.exe** file to start the setup program.
- 2. The Setup Wizard will start the installation process. Read the instructions, then select Next to continue.
- 3. Review the License Agreement.
- 4. After agreeing. You may choose a new location for the program files or accept the default (recommended). Click **next** to continue.

C Ultimaker Cura Setup	_		×
Choose Install Location			
Choose the folder in which to install U	timaker Cur	a.	
Setup will install Ultimaker Cura in the following folder. To install in a Browse and select another folder. Click Next to continue.	different fo	lder, dick	
Destination Folder	Bro	wse]
Space required: 550.0MB Space available: 266.0GB			
Nullsoft Install System v2.51 —	Vext >	Cano	el

5. You may select a Start Menu folder or leave it blank (recommended) and then select next.

Choose S	tart Menu Folder		
Choose a l	Start Menu folder for the	Ultimaker Cura	shortcuts.
Select the Start Menu folder in which yo can also enter a name to create a new f Ultimaker Cura		program's shor	tcuts. You
Ultimaker Cura			
Accessibility Accessories Administrative Tools AutoCAD Electrical 2018 - English Autodesk Autodesk Inventor 2015 Cisco Dropbox DWG TrueView 2015 - English DYMO Label Trunes			
Do not create shortcuts			
lsoft Install System v2.51			

6. Ensure that all boxes are checked, then click **install** to continue.

🗲 Ultimaker Cura Setup			-		X
	hoose Componer hoose which featu		r Cura you want	to install.	
Check the components you wa install. Click Install to start the		check the comp	oonents you don'	t want to	
Select components to install:	 ✓ Ultimaker Cu ✓ Install Arduir ✓ Install Visual ✓ Open 3MF fill ✓ Open OBJ fill ✓ Open X3D fill ✓ Open X3D fill ✓ Open GCODI 	to Drivers Studio 2015 Re es with Cura es with Cura es with Cura es with Cura	edistributable		
Space required: 550.0MB	Open GCOD	thes with Cura	3		
Nullsoft Install System v2.51 —		< Back	Install	Cancel	
Ultimaker Cura Setup	stalling		-		×
	lease wait while U	timaker Cura is	s being installed.		
Extract: mkl_avx2.dll					
Show details					
Nullsoft Install System v2.51		< Back	Next >	Cance	sl.
		< DOCK	NCAL >	Carlet	-1

7. Once the files have been extracted and Cura installation is complete, the driver installation wizard will launch. Click **INSTALL** to continue.

E Windows Security	×
Would you like to install this device software?	
Name: Adafruit Industries LLC Ports (COM & LPT Vublisher: Adafruit Industries	
Always trust software from "Adafruit Industries". Install Don't Insta	ill
You should only install driver software from publishers you trust. How can I decid which device software is safe to install?	<u>le</u>



8. Click **Finish** to complete the driver installation.

Device Driver Installation Wizar	d	
	Completing the De Installation Wizard	
	The drivers were successfully in	stalled on this computer.
	You can now connect your dev came with instructions, please re	ice to this computer. If your device ad them first.
	Driver Name	Status
	✓ Arduino LLC (www.ardui	Ready to use
	< Back	Finish Cancel

- 9. Click **next/close/finish** to continue and start the software.
- 10. Wait for Cura to finish launching. If this is the first time you have run Cura on this machine, Cura will automatically launch the **First time run wizard**. Otherwise, you will need to select from the drop down menu: **Settings>Printer>Add Printer**.



11. Select "Add a non-networked Printer", a list will expand. Go to Other and select Malyan M200, then Enter Pellet Extruder for Printer name, then select Add.

	Add a printer	
Add a network	ed printer	<
Add a non-netv	worked printer	``````````````````````````````````````
<u> </u>	isa Tairona 13	
MakerBotR		
 Malyan M1 Malyan M2 		
<u> </u>	ulscale XT Plus	
Mark2 for I		
Mendel90		
Monoprice	Select Mini V1	
Monoprice	Select Mini V2 (E3D)	
NWA3D A5		
Peopoly Me	oai	
O Printrbot P		
O Printrbot P	'lay (Heated Bed)	
×	imple šimple Maker's Kit (1405)	
ž	imple Metal Extended	

12. Machine Settings will pop-up, your values should be the same as the figure below for the Printer Tab.

Pri	nter	1	Extruder 1	
Printer Settings		Printhead Setting	js	
(Width)	120 mm	X min	20	mm
(Depth)	120 mm	Y min	10	mm
(Height)	120 mm	X max	10	mm
uild plate shape	Rectangular 🗸	Ymax	10	mm
Drigin at center		Gantry Height	120	mm
leated bed	~	Number of Extruders	1	\sim
G-code flavor	Marlin 🗸			
Start G-code		End G-code		
G21; (metric values) G90; (absolute positior M82; (set extruder to a M107; (start with the f G28; (Home the printer G92 E0; (Reset the ext	absolute mode) an off) r)	G0 X0 Y127;(Stick M190 S0;(Turn off M104 S0;(Turn off M107;(Turn off step M84;(Turn off step	heat bed, don nozzle, don't v rt fan)	

13. For the Extruder Tab, this controls your extrusion rates. Please note that the Nozzle size will be used to determine the flow rate/extrusion rate. This is a function of the material viscosity and the nozzle tip use. You may need to change this value until you've established the correct extrusion rate. To setup, let's start let's use the values below. You can always change them later by going to: Settings>Printer>Manage Printers, then selecting Machine Settings. Then click finish or close.

Printer			Extruder 1
lozzle Settings			
lozzle size	0.6	mm	
compatible material diameter	0.1	mm	
lozzle offset X	0	mm	
lozzle offset Y	0	mm	
Cooling Fan Number	0		
Extruder Start G-code		Extr	uder End G-code

14. The program will finish launching and leave you on the main screen. On the Top, next to the printer's name, you should be able to change your print parameters. For material is may say "EMPTY": (THIS STEP IS OPTIONAL)

G Ultimaker Cura									-		×
<u>File Edit View Settings Extensions Preferences Help</u>											
cura		PREPARE	PREVIEW	MONITOR					Marketplace	Sig	in in
Tissue Scribe < 😲 generic	empty			`	~	Fine 0.1313mm	22%	🖸 Off	÷ On		
	Custom										
	Material	empty		×							

You do not have to create a material profile to start using the printer, you can continue with this as blank. Select the **Basic** tab, then change the settings to match those in the accompanying image for PLA filament. (PLA is generic since these interface are not set for bio-materials. You will have to manually set the temperature and extrusion rate).

Note: The fill density, support type, platform adhesion types, temperature, etc options should be set according to the needs of the model you are printing.

The fill density will determine the overall strength of the finished object and the internal architecture. It is not recommended to use support with biological model. Unless absolutely critical and need, this will depend on the user.

Since there are no set standards in bioprinting, the selection of the features/settings below is up to the user. Take notes of what works for your printing needs. Note that it will require a few trials to get it right. It is recommended to test your printing before printing the actual experimental sample.

The extrusion rate is controlled by changing the values of: Filament Diameter, Flow, and Nozzle size. It is best to match the nozzle size to that which is installed and increase or decrease the filament diameter until gaining an extrusion rate that works best.

Fine 0.1313mm	2 100%	🖸 Off	÷ Off 🖋
Print settings			×
Profile Fine			*~
Q search settings			≡
Quality			~
Layer Height	do.	0.1313	mm
🛽 Shell			~
Wall Thickness		1.05	mm
Wall Line Count		3	
Top/Bottom Thickness		0.72	mm
Top Thickness		0.72	mm
Top Layers		0	
Bottom Thickness		0.72	mm
Bottom Layers		999999	
Horizontal Expansion		0	mm
🖾 Infill			~
Infill Density	n	100	%
Infill Pattern		Lines	~
Material			~
Printing Temperature	50	215	°C
Build Plate Temperature	8° 7	0	°C
Enable Retraction		~	
③ Speed			~
Print Speed	n	5	mm/s
Infill Speed		5	mm/s
Wall Speed	50	5	mm/s
Outer Wall Speed	20	5	mm/s
Inner Wall Speed		5	mm/s
Travel Speed	50	5	mm/s
Initial Layer Speed	50	5	mm/s
Travel			<
券 Cooling			~
Enable Print Cooling		~	
Fan Speed		100.0	%

15. (Hamid, Q. 2014, Combining fabrication and surface modification techniques to develop cell-laden microfluidic devices) have validate material deposition as a function viscosity, pressure, and tip size: Material from the printer head is governed by the material viscosity, applied pressure, length of the nozzle tip, and the radius of the nozzle. To accurately input the process parameters needed for a specific filament size, Poiseuille's Law (Equation 0-1) is utilized.

$$\frac{dV}{dt} = \frac{\pi}{8} \left(\frac{R^4}{\eta}\right) \left(\frac{P}{L}\right) \tag{0-1}$$


where R is the radius of the nozzle, P is the applied pressure at the inlet (inner orifice of the nozzle) of the nozzle, L is the length of the nozzle, and η is the viscosity of the material. The pressure, P of the photo-polymer head is calculated with Equation 0-2 where F is the applied force and d is the diameter of the syringe. Experimentally derived; the maximum force at the maximum feed-rate of 1000 mm/min for a 10 mL syringe of the photo-polymer head is 110 lbs, while the maximum force at the minimum feed-rate of 1 mm/min of the photo-polymer head is 133 lbs.

$$P = \frac{F}{2\pi d^2} \qquad \qquad 0-2$$

The force required for motion is calculated using Equation 0-3, where A is the cross-sectional area of the syringe, l is the length of total volume of material in the syringe, and v is the motion speed of the syringe's plunger. This force is directly proportional to speed, greater forces will result in faster flow rates.

The motion speed of the syringe's plunger is calculated using Equation 0-4 where P_1 is the applied pressure and P_2 is the pressure at the end of the syringe (where the nozzle is connected), r is the inner radius of the syringe. The speed at any point is proportional to the change of pressure per unit length (pressure gradient).

- 16. Finally, using the included Micro USB cable, plug one end into the usb port on the printer, then plug the other end into an available USB port on the your computer. Watch the right hand corner of the screen. A bubble will appear in the lower right corner of your computer which is telling you that windows is installing the necessary printer drivers. Click the bubble and verify the drivers have been properly installed.
- 17. You may modify the start and end code of your gcodes by selecting the Start/End-GCode tab. This area is used to setup beginning and ending constraints of your print. For example, if you're manually set the starting position of your print job, you will not want to home the axis first and then go to that position and print. In this case you will remove the homing codes and use the M92 Code to set the current value of the current position. Hence the printer will use those value.

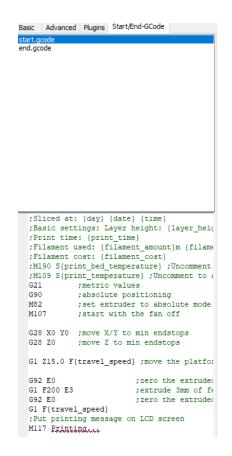

This is an example of a startup code for printing at the point in the printer is current at. This sets the current position of the nozzle at X=0, Y=0, Z=0. This code will not home any of the printer's axis.

M109 S25.000000G21;metric valuesG90;absolute positioningM82;set extruder to absolute modeM107;start with the fan offG92 E0;zero the extruded lengthG92 X0 Y0 Z0;set current position of X Y Z to zeroG1 F1200

Now if your current position is not 0, 0, 0, modify the bolded code below to change it. Typically, this can be the value of your starting point of your model, this will be the first line of code when you're generating your g-code. No worries, this value can be entered/modified after you've generated the codes once.

M109 S25.000000

- G21 ;metric values
- G90 ;absolute positioning
- M82 ;set extruder to absolute mode


M107;start with the fan offG92 E0;zero the extruded lengthG92 X0 Y0 Z0;set current position of X Y Z to zeroG1 F1200

13 ongratulations, you have installed Cura and connected your PC to your new 3D Bioprinter! Refer to Cura's documentation for operating details and information on the various options available to you.

Loading a CAD MODEL (.stl) into Cura and generating G-codes.

You can also install Repetier-Host from the file on the included microSD card from an internet download. The screenshots below shows the proper settings to use for this bio-printer in Repertier-Host.

- 1. Click on the "Load" icon to load your .stl file into Cura.
- Locate your stl file and load into the software. Cura will place your model in the center of the build. You may move, scale, mirror, and rotate your model to a position and orientation that fits your needs. The icons are at the bottom left. To move, click on the model and then drag.

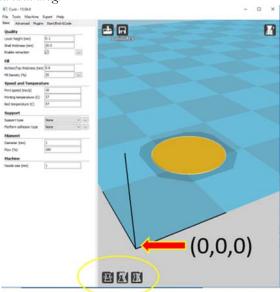

3. Click save toolpath to generate your g-code (located next to the load file icon).

Installing Repetier-Host

You can also install Repetier-Host from the file on the included microSD card from an internet download. The screenshots below shows the proper settings to use for this bio-printer in Repertier-Host.

関 Re	petier-H	ost V1.6.	2 - tablet.am	nf						↔	_		×
File	View	Config	Printer	Server Tools	Help	_							
0	- 🗐		anguage rinter Setting	25	► Ctrl+P				1	0 ⁸	EASY	C.	5
Connec	_			ROM Configuration				01		er Settings		Emergen	cy Stop
3D Viev	V Temp	U	nits of impo	orted Objects	•				Slicer Print Preview M	lanual Control	I SD Card		
C		P	references		Alt+P			B C 4] 🛄 🗘 🛦 🤉	\$			
+	~							Object Group	1				
.	\mathcal{N}						\wedge	tablet		1		~ 0	盦
4							/ /						
Ð					\otimes								
Q)		\sim		\times			STAY IN T	OUCH WITH	YOUR	3D PR		R
		$\langle \langle \rangle$	\sim		\times		*		SA OII	Receiv	e free sta	atus pus	h
	÷٢.,		\sim		X h						ges on yo smartpho		t
								Management of the second secon		Scan to	ao to	回話電	
			\times			\sim		Bonot	ior Anno com	Apple Ap	op Store or - Play Store	* 3 82	ŝ.
D.				\sim		\searrow		reher	ier-Apps.com		lay Store	■343	*
Show in		Comma	-		-	ACK Auto Scroll	💼 Clear Lo	од 🖓 Сору					
	:57.45					lity Profile Contex put GL AMDX vertex		essellator GL	AMD conservative	depth GL	AMD deb	ug outpi	ut G
		6 Ope	nGL rende	erer:ATI Rade	on HD 4550			-					
	: 57 . 45 nected: d		ng fast \	VBOs for rend	ering is po	ossible			Idle				*
Disconi	iecteu: u	leidult				-			lule				.::
Printe	er Settings	5					Printer Set	tings					
Printe	er:	default				~ 💼	Printer:	default			~	1	
Conn	ection P	rinter Ext	ruder Printer	Shape Scripts Adv	anced		Connection	Printer Extruder P	rinter Shape Scripts Advan	ced			
Tra	vel Feed F	Rate:		4800	[mm/min]		Numbe	r of Extruder:	1				
Z-	Axis Feed I	Rate:		100	[mm/min]			xtruder Temperature:	250				
Ma	anual Extru	ision Spee	d:	2	20	[mm/s]		ed Temperature:	60				- 1
Ma	anual Retra	action Spe	ed:	30	[mm/s]			olume per second		[mm ³ /s]			
De	efault Extru	der Tempe	erature:	200	°C		8		r (one nozzle for all colors)				- [
De	fault Heat	ed Bed Te	mperature:	55	°C		1						
	Check E	xtruder & B	led Temperatur	e			Extruder Name:						
	Remove	temperatu	re requests fron	n Log			Diamete	r: 0.4	[mm] Temperature Offs	set: 0		[°C]	
Ch	ieck every	3 seconds	8.				Color:						
Pa	ırk Position	i: X:	0	Y: 0	Z min: 0	[mm]	Offset X	. 0	Offset Y:	0		[mm]	
	Send ET/	A to printer	display		Go to Park Posit	ion after Job/Kill	2						
1	Disable E				Disable Heated		1						
	Disable M				Printer has SD c	ard	x						1
Add	to comp.	Printing Ti	me 8	[%]			i						1
ş Inv	ert Directio	on in Contre	ols for [X-Axis Y	Axis 🗌 Z-A	xis 🗌 Flip X and Y	1 43						3
5							2						
							-						
					ОК	Apply Cancel				OK	Apply	Cancel	

Printer Settings			
Printer: default 🗸 💼			
Connection Printer	Extruder Printer Shape	Scripts Advanced	
Printer Type:	Classic Printer	~	^
Home X: Min	✓ Home Y: Mi	n v Home Z: Min v	
X Min 0	X Max 110	Bed Left: 0	
Y Min 0	Y Max 110	Bed Front: 0	
Print Area Width:	110	mm	
Print Area Depth:	110	mm	
Print Area Height:	100	mm	
center of the print bed,	if supported by firmware.	ues you can even move the origin in the	
, 	2	E	1
H H		¥	~
		OK Apply Cancel	I

PRINTER & NOZZLE SETUP

Perform the following steps to prepare the printer for use.

Out of Box Setup

- 1. Remove the printer from its packaging and place it on a flat, stable surface with plenty of ventilation and a nearby AC power outlet.
- 2. Remove the any tape or cable ties holding the nozzle.
 - a. If the nozzle is not connected to the motion arm; There are a series on mounting holes for the nozzle (figure below, left), line up to your desired placement and use the hex tool to tighten both screws (figure below, right).
 - b. Future adjustments can be made by moving to different holes or moving the nozzle up and down.



- 3. Ensure that the power switch on the rear panel is in the OFF position ("O" side depressed). Plug the C13 end of the included AC Power Cable into the C14 panel connector on the AC Power Adapter, then plug the other end into a nearby AC power outlet. Press the "I" side of the power switch to power the printer ON.
- 4. Printer is ready for use. Before using, calibrate the nozzle to the Z zero position.

Zeroing the nozzle

Before printing, it is recommended that you zero the nozzle. Zeroing the nozzle ensures that the tip is always set to a reference zero position. Since most tips have a different length you would want to ensure when a tip is changed the reference zero point is calibrated. To set the reference zero, do the following:

- 1. Do NOT install the head/nozzle as yet.
- 2. Insert the microSD card and run the code "NOZZLESETUP.gcode". This code will move the nozzle to the print platform.
 - Print
 Cura_16.04.2.exe
 drive.inf
 setupRepetierHost_1 0_1.ex
 Scaffold.gcode
 ATEST.gcode
 ATEST.gcode
 ATEST3.gcode
 ATEST3.gcode
 ATEST3.gcode
- 3. Install the printer head/nozzle onto the mounting plate. Do not tighten screws as yet.
- 4. If you're printing into a petri dish add it to the platform, directly under the nozzle/print head.
- 5. Place two sheets of paper between the tip of the print head and the platform, then balance and tighten the mounting screws.
- 6. The tip of your nozzle is now at the zero Z position and is ready to print.
- 7. Repeat if you need to recalibrate or reset the physical Z zero position.

Getting Started/Loading Material

Before loading material into the printer, pre-heat for about 10-15 minutes. Then add material and feed it thru the nozzle until material is extruded out the tip. Once material is load, you can now print. Using the supplied G-code 'ContFeed' will create a continuous motion for the feedscrew, allowing the filling of the nozzle.

REGULATORY COMPLIANCE NOTICE FOR FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device is for research and development use only! Any other uses are not permitted. Modifications are not permitted. Any modifications are at your own risk. This device is not intended to be used on humans or animals. This device may use human products or any products approved for research and development purposes only. Any biological materials used, must be from an approved source. Use at your own risk.

Microsoft and windows are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Apple, Mac, and OS X are trademarks of Apple Inc. registered in the US and other countries.

SD, SDHC, and microSD are trademarks or registered trademarks of SD-3C, LLC in the United States, and other Countries.